


WE-1550-RT1-CW Series High-power Optical Amplifier (With WDM)



1. Product Overview

WE-1550-RT1-CW optical amplifier uses well-known high-performance erbium-ytterbium co-doped double-clad fiber and low-noise pump laser. It has a reliable circuit design and efficient heat dissipation design. The maximum total output power of the whole machine can reach +37dBm, and it supports up to 16 outputs, with optional optical switch, CWDM, and RF detection. It provides SNMP protocol network management software and WEB network management, suitable for amplified transmission of downstream 1550nm optical signal in FTTH network.

2. Block diagram

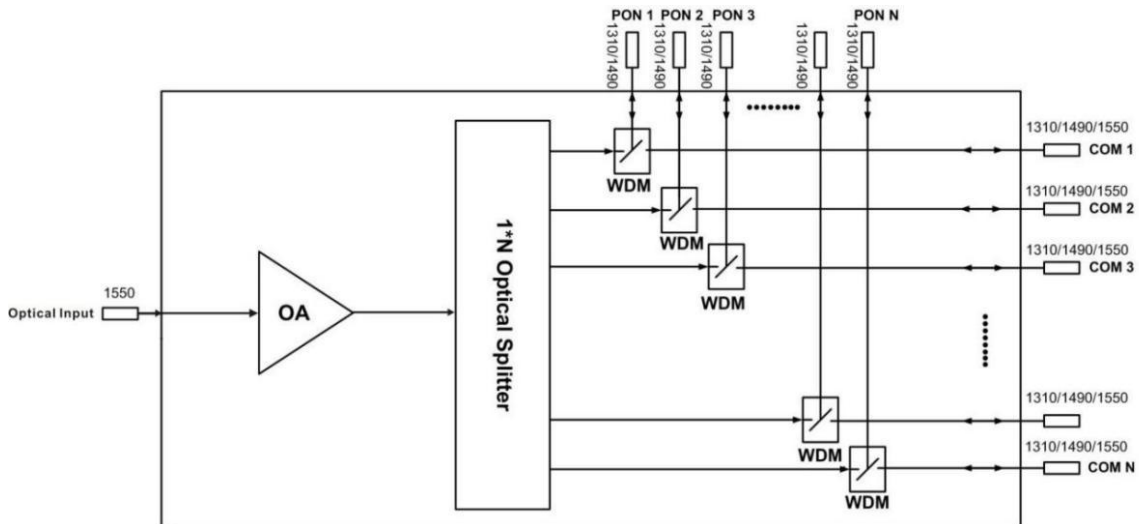


3. Technique Parameter

| Item | Unit | Technique parameters | Remark |
|-----------------------------|--------|---------------------------|-------------------|
| EDFA | | | |
| Operating wavelength | nm | 1545 - 1565 | |
| Optical input power range | dBm | -10 - +10 | |
| Output power stability | dBm | ±0.5 | |
| Noise figure | dB | ≤ 5.5 | input power: 0dBm |
| Return loss | Input | dB | ≥ 50 |
| | Output | dB | ≥ 50 |
| Optical connector type | | SC/APC , LC/APC or E/2000 | |
| Pump leakage to input | dBm | ≤ -30 | |
| Pump leakage to output | dBm | ≤ -30 | |
| Polarization Dependent Gain | dB | <0.5 | |

| | | | |
|--------------------------------|----|--|----------------|
| Polarization Mode Dispersion | Ps | <0.5 | |
| Optical power adjustable range | dB | 6 | accuracy 0.1dB |
| optical detection | dB | -20±1 | |
| CWDN | | | |
| PON wavelength | | 1260 - 1360 & 1480 - 1500 | |
| PON Insertion loss | dB | ≤ 0.8 | |
| Isolation | dB | ≥15: Com-PON ≥30: Com-CATV | |
| MAX input power | mw | 500 | |
| Connector type | | SC/APC, SC/UPC | |
| General Characteristics | | | |
| Power voltage | V | AC 100 ~ 240/(50-60 Hz); DC 36 ~ 72 | |
| Total power consumption | W | ≤ 50 | |
| Operating temperature range | ℃ | -10 - +50 | |
| Operating relative humidity | % | Max 85% no condensation | |
| Storage temperature range | ℃ | -40 - +80 | |
| Dimensions | mm | 483 (L) x 360 (W) x 44 (H) | |


4 External Function Description

4.1 Front Panel Description

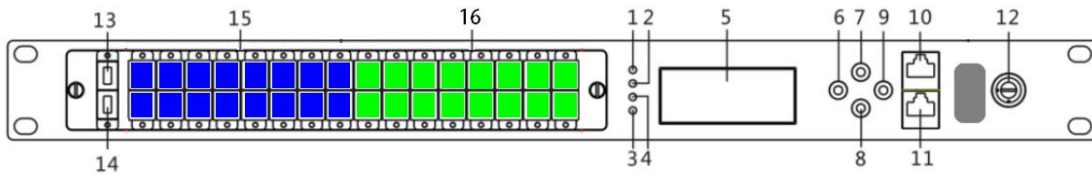


1. Power indicator: Dual power supplies are normal--green; single power supply is normal-- yellow; abnormal--red light flashes.
2. Optical input power indicator: The optical power of both input ports is normal--green. The optical power of one of the input ports is normal--yellow. The optical power of both input ports is abnormal--red light flashes.
3. Optical output power indicator: Optical output power in normal range—green; abnormal—red light flashes.
4. Pump working status indicator: All states are normal-- green; any alarm occurs among EC, temperature, pump power and so on, the red light flashes. For related fault causes, view the alarm menu in the display menu.
5. LCD screen: used to display all the parameters of the machine.
6. Display the exit or cancel key of the setup menu.
7. Display the up or increase key of the setup menu.
8. Display the down or decrease key of the setup menu.
9. Display the enter key of the setup menu.
10. RJ45 port.
11. RS232 port.
12. Pump laser switching key: used to control the working status of pump laser. “ON” means the pump laser is open and “OFF” means the pump laser is closed. Ensure the key is on “OFF” position before power on. After passing self-test, rotate the key to “ON” position according to the displayed message.
13. Optical signal input, the default connector type is SC/APC.
14. Optical detection port , the default connector type is SC/APC
15. PON input port
16. COM output port

4.2 Rear Panel Description

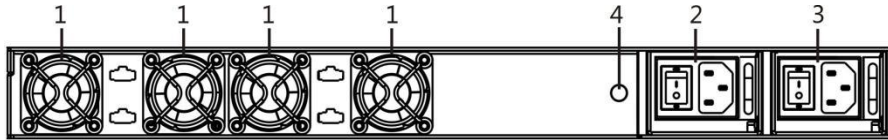

1. Fan outlet.
2. Power supply 1.
3. Power supply 2.
4. Ground stud of the housing: used for the connection of device and ground wire.

4.3 DC Power Introduction

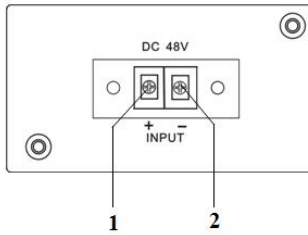

| | |
|---|---------------------------|
| 1 | + Positive terminal block |
| 2 | - Negative terminal block |

5 Menu System

5.1 Main Menu

| Name | Display | Description |
|-----------------|---------------------------------|---|
| System Starting | xxxxxxx | Manufacturers' logo |
| | xxxxxxx | Equipment model |
| | xxxxxxx | Start countdown / lock status |
| Suspend Page | In: xx.x out: xx.x Unit: dBm | Display the optical input / output power Unit: dBm |
| Main Page | 1.Disp Parameters | Entry of parameter display menu |
| | 2.Set Parameters | Entry of parameter setup menu |
| | 3.Alarm Status | Entry of alarm information menu |

5.2 Display Menu

| | |
|------------------------|--|
| Input Power : xx.x dBm | Input power, accurate to 0.1 dBm |
| Output Power: xx.x dBm | Output power, accurate to 0.1 dBm |
| PreEDFA Power:xx.x dBm | The first stage amplification. output power, accurate to 0.1 dBm |
| Current Channel | Current channel A/B |
| Pump1 Bias: xx.x mA | Bias current of pump1, accurate to 1 mA |
| Pump1 Temper: xx.x °C | Temperature of pump1, accurate to 0.1 °C |
| Pump1 Tec: xx.x mA | Cooling current of pump1, accurate to 1 mA |
| Pump2 Bias: x.x mA | Bias current of pump2, accurate to 1 mA |
| Pump2 Temper: xx.x °C | Temperature of pump 2, accurate to 0.1 °C |
| +5V Read: x.x V | +5V power supply voltage , accurate to 0.1 V |
| System Temper: xx °C | Housing temperature, accurate to 0.1 °C |
| SN | Device serial number |
| IP Addr | IP address |
| Mask | Subnet mask |

| | |
|--------------|-------------------------|
| Gateway | Gateway |
| MAC | Physical address |
| Trap Addr1 | trap1 address |
| Trap Addr2 | trap2 address |
| NTP Addr1 | NTP server1 address |
| NTP Addr2 | NTP server2 address |
| UTC Offset | UTC offset |
| Firmware Ver | Firmware version number |

5.3 Setup Menu

| | |
|------------------------|---|
| Low Input Threshold | Set low alarm threshold of optical input power, range: -10.0~10.0dBm |
| High Input Threshold | Set high alarm threshold of optical input power, range: -10.0~10.0dBm |
| Set EDFA Mode | APC or ACC |
| Set Output Power | Set optical output power |
| Set IP Addr | Set IP address |
| Set Mask | Set subnet mask |
| Set Gateway | Set gateway |
| Set Trap1 Address | Set trap1 |
| Set Trap2 Address | Set trap2 |
| Set NTP Server1 | Set NTP server1 address |
| Set NTP Server2 | Set NTP server2 address |
| Set UTC Offset | Set UTC offset |
| Set Buzzer Switch | Set buzzer switch |
| Restore Factory Config | Restore the factory default configuration |


5.4 Warning menu

| | | |
|-----------------------------|----------------------|--------------------------------------|
| Input power: xxx | xxx= <i>Lolow</i> : | Very low optical input power alarm |
| | xxx= <i>Low</i> : | Low optical input power alarm |
| | xxx= <i>High</i> : | High optical input power alarm |
| | Xxx= <i>Hihigh</i> : | Very high optical input power alarm |
| Output power: xxx | xxx= <i>Lolow</i> : | Very low optical output power alarm |
| | xxx= <i>Low</i> : | Low optical output power alarm |
| | xxx= <i>High</i> : | High optical output power alarm |
| | Xxx= <i>Hihigh</i> : | Very high optical output power alarm |
| System temperature: xxx | xxx= <i>Lolow</i> : | Very low device temperature alarm |
| | xxx= <i>Low</i> : | Low device temperature alarm |
| | xxx= <i>High</i> : | High device temperature alarm |
| | Xxx= <i>Hihigh</i> : | Very high device temperature alarm |
| Pump laser current: xxx | xxx= <i>Lolow</i> : | Very low current alarm of pump x |
| | xxx= <i>Low</i> : | Low current alarm of pump x |
| | xxx= <i>High</i> : | High current alarm of pump x |
| | Xxx= <i>Hihigh</i> : | Very high current alarm of pump x |
| Pump laser power: xxx | xxx= <i>Lolow</i> : | Very low power alarm of pump x |
| | xxx= <i>Low</i> : | Low power alarm of pump x |
| | xxx= <i>High</i> : | High power alarm of pump x |
| | Xxx= <i>Hihigh</i> : | Very high power alarm of pump x |
| Pump laser temperature: xxx | xxx= <i>Lolow</i> : | Very low temperature alarm of pump x |

| | | |
|---------------------------|---------------------|---------------------------------------|
| | <i>xxx= Low:</i> | Low temperature alarm of pump x |
| | <i>xxx= High:</i> | High temperature alarm of pump x |
| | <i>Xxx= Hihigh:</i> | Very high temperature alarm of pump x |
| Power supply voltage: xxx | <i>xxx= Lolow:</i> | Very low +5V DC power supply alarm |
| | <i>xxx= Low:</i> | Low +5V DC power supply alarm |
| | <i>xxx= High:</i> | High +5V DC power supply alarm |
| | <i>Xxx= Hihigh:</i> | Very high +5V DC power supply alarm |
| Fan | <i>Fan invalid</i> | Cooling fan is invalid |

6.Communication Setup Descriptions

6.1 Connection Description: RJ45 to DB-9

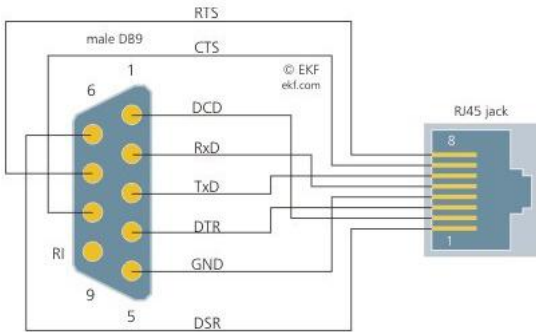


| RJ-45 PIN | DB9 female PIN |
|-----------|----------------|
| 1 | 2 |
| 2 | 3 |
| 6 | 5 |
| 3 | 1 |
| 4 | 4 |
| 5 | 6 |
| 7 | 7 |
| 8 | 8 |

The communication is asynchronous, and the byte frame format is: 1 start bit, 8 data bits, 1 stop bit, no parity; baud rate: 38400 bps.

6.2 WEB Network Management

- Opening the IE browser and entering the equipment IP address leads to the following interface:
- user name: **admin** password: **123456**

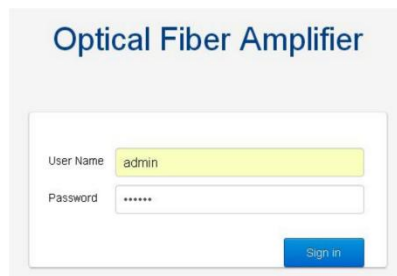

- Status interface: display EDFA parameters

Optical Amplifier

| Status | status | |
|----------|--------------------|-----------------|
| Settings | Input powerA | 0.0 dBm |
| Network | Input powerB | -99.0 dBm |
| Spectrum | Ouput power | 17.0 dBm |
| Update | Current Channel | A |
| Alarm | Pump1 bias | 551 mA |
| About | Pump1 temperature | 24.6 °C |
| | Pump1 tec | 64 mA |
| | Pump2 bias | 1800 mA |
| | Pump2 temperature | 25.0 °C |
| | Device temperature | 23.8 °C |
| | DC +5V | 4.9 V |
| | Power1 Status | off |
| | Power2 Status | on |
| | Up-time | 0 days 00:46:02 |

● Settings interface: set EDFA parameters

Optical Amplifier

| | | |
|----------|--------------------------------------|--------------------|
| Status | settings | |
| Settings | Set Output power | 17.0 dB (9.5~21.5) |
| Network | LOW Input Threshold | -5.0 dBm |
| Spectrum | HIGH Input Threshold | 12.0 dBm |
| Update | Set Pump Status | ON ▾ |
| Alarm | Set EDFA Mode | ACC ▾ |
| About | <input type="button" value="Apply"/> | |

| | |
|--------------------------------------|--------------------|
| set switch | |
| Operating mode | Manual ▾ |
| Set current channel | A ▾ |
| Switching thresholds | -8.0 dBm (-10~+10) |
| <input type="button" value="Apply"/> | |

| | |
|--|---------|
| setting fan | |
| Setting the fan operation mode | Auto ▾ |
| Setting fan on/off | on ▾ |
| Setting the temperature for the automatic operation of fan | 20.0 °C |
| <input type="button" value="Apply"/> | |

| | |
|--------------------------------------|-----------|
| setting language | |
| Select language | English ▾ |
| <input type="button" value="Apply"/> | |

| | |
|--------------------------------------|------|
| restore factory config | |
| Restore Factory | NO ▾ |
| <input type="button" value="Apply"/> | |

| | |
|--------------------------------------|------|
| restart | |
| Restart Device | NO ▾ |
| <input type="button" value="Apply"/> | |

● Network interface: Configure network parameters

Optical Amplifier

| | | |
|----------|--------------------------------------|-------------------|
| Status | IP settings | |
| Settings | MAC address | 30:71:22:33:44:55 |
| Network | IP address | 192.168.77.233 |
| Spectrum | Subnet mask | 255.255.255.0 |
| Update | Default gateway | 192.168.77.1 |
| Alarm | <input type="button" value="Apply"/> | |
| About | | |

| | |
|--------------------------------------|----------------------|
| Web password | |
| UserName | admin ▾ |
| New password | <input type="text"/> |
| Confirm new password | <input type="text"/> |
| <input type="button" value="Apply"/> | |

| | |
|--------------------------------------|--------|
| SNMP settings | |
| Read-only community | public |
| Read-write community | public |
| <input type="button" value="Apply"/> | |

| | |
|--------------------------------------|---------------|
| SNMP trap address | |
| Trap address1 | 192.168.77.16 |
| Trap address2 | 192.168.77.99 |
| <input type="button" value="Apply"/> | |

| | |
|--------------------------------------|-------------------------|
| NTP settings | |
| UTC Offset | UTC+8:00 UTC-12:00 ▾ |
| NTP server IP address1 | 202.108.6.95 |
| NTP server IP address2 | 141.82.25.201 |
| <input type="button" value="Apply"/> | |

- **Update interface: Software online upgrade**

Optical Amplifier

| | | |
|----------|---|---|
| Status | Update firmware | |
| Settings | Step 1: upload new firmware file | |
| Network | Selected files | No files selected <input type="button" value="Upload"/> |
| Spectrum | Upload status: awaiting upload | |
| Update | Step 2: once upload is successful , restart to update firmware | |
| Alarm | | |
| About | | |

- **Alarm interface: Display alarm information**

Optical Amplifier

| | | |
|----------|---|--|
| Status | Alarm log | |
| Settings | Alarm log size | 69 entries |
| Network | Erase Alarm log | <input type="button" value="Erase log"/> |
| Spectrum | Show Alarm log | <input type="button" value="Show log"/> |
| Update | | |
| Alarm | <input type="button" value="No."/> <input type="button" value="Code"/> <input type="button" value="Up time"/> <input type="button" value="Date and Time"/> <input type="button" value="Message"/> | |
| About | | |

- **About interface: EDFA related information**

Optical Amplifier

| | | |
|----------|--------------------|-----------|
| Status | System information | |
| Settings | Device model | EDFA |
| Network | Serial number | SN123456 |
| Spectrum | Firmware version | V1.00.254 |
| Update | | |
| Alarm | | |
| About | | |

7 Attention

- Ensure the package is not defaced. If the equipment is damaged due to transportation or other reasons, please don't electrify to avoid worse damage.
- Before powering on, make sure that the grounding terminals of the chassis and power socket are reliably grounded, and the grounding resistance should be $<4\Omega$, which can effectively protect against surges and static electricity.
- Optical amplifier is a highly technical professional equipment, its installation and debugging must be operated by professional technicians. Read this manual carefully before operating to avoid damage to equipment caused by fault operation or accident harm to the operator.
- When installing and debugging optical equipment, invisible laser beams may be emitted inside the fiber connector. Avoiding permanent harm to the body and eye, the fiber connector should not aim at the human body and human should not look directly at the fiber connector with the naked eye!
- There must be no shielding outside the ventilation holes of the device. Poor ventilation will cause the index to decrease, and in serious cases will cause damage to the device.
- When cleaning the fiber end face, you must confirm that the optical source is turned off.
- When the fiber connector is not in use, put a dust cover to avoid dust pollution and keep the end surface of the optical fiber clean.
- When installing the fiber connector, apply appropriate force to avoid damage to the adapter. Otherwise, the output optical power may decrease.

Hangzhou Prevail Communication Technology Co.,LTD.
Hangzhou Prevail Optoelectronic Equipment Co.,LTD.
 Both **PREVAIL** and **Prevail** are registered trademarks of our

