

PREVAIL

WR-1002-JDS

Optical Receiver Manual



1. Product Summary

WR-1002-JDS is our new ring network self-healing CATV network optical receiver. The pre-amplifier adopts all-GaAs MMIC, post-amplifier adopts GaAs module. Optimized circuit design coordinate with our 10 years design experience, the device achieve high performance index. Microprocessor control, digital display the parameters that make the engineering debug very convenience. It is the main products to build CATV network.

2. Performance Characteristics

- High response PIN photoelectric conversion tube.
- Two-channel optical signal receive, mutually backup, arbitrarily set up the auto-switching conditions, also can be set to manual switching.
- Optimized circuit design, SMT process production, optimized signal path, make the photoelectric signal transmission more smooth.
- Specialized RF attenuation chip, good RF attenuation and equilibrium linear, high accuracy.
- GaAs amplifier device, power double output, high gain and low distortion.
- Single Chip Microcomputer (SCM) control equipment working, LCD display the parameters, convenience and intuitive operation, and stable performance.
- Excellent AGC performance, when the input optical power range is $-9 \sim +2\text{dBm}$, the output level keep unchanged, CTB and CSO basically unchanged.
- Temperature-controlled cooling fan with low noise and high reliability.
- Reserved data communication interface, can connect with the Ethernet transponder, access to network management system.

3. Technique Parameter

3.1 Link testing conditions

The technique parameters of this manual according to the measuring method of GY/T 194-2003 <Specifications and methods of measurement on optical node used in CATV systems>, and tested in the following conditions.

Testing conditions:

Forward optical receive part: with 10km standard optical fiber, passive optical attenuator and standard optical transmitter composed the testing link. Set **59 PAL-D** analog TV channel signal at range of **45/87MHz~550MHz** under the specified link loss. Transmit digital modulation signal at range of **550MHz~862/1003MHz**, the digital modulation signal level (in **8 MHz** bandwidth) is **10dB** lower than analog signal carrier level. When the input optical power of optical receiver is **-2dBm**, the RF output level is **108dBμV**, with **9dB** output tilt, measure the **C/CTB**, **C/CSO** and **C/N**.

Note: When the rated output level is the system full configuration and the receiving optical power is **-2dBm**, equipment meets the maximum output level of link index. When the system configuration reduce (that is, actual transmission channels reduce), the output level of equipment will be increased.


Friendly Notice: Suggest you setting the RF signal to **6~9dB** tilt output in the practical engineering application to improve the nonlinear index (under the node) of the cable system.

3.2 Technique Parameters


Item	Unit	Technical Parameters
Optical Parameters		
Receiving Optical Power	dBm	-9 ~ +2
Optical Return Loss	dB	>45
Optical Receiving Wavelength	nm	1100 ~ 1600
Optical Connector Type		FC/APC, SC/APC or specified by the user
Fiber Type		Single Mode
Link Performance		
C/N	dB	≥ 51 (-2dBm input)
C/CTB	dB	≥ 67
C/CSO	dB	≥ 63
RF Parameters		
Frequency Range	MHz	50 ~862/1003
Flatness in Band	dB	± 0.75
Rated Output Level	dB μ V	≥ 98 (-9dBm ~ +2dBm)
Max Output Level	dB μ V	≥ 104 (Output use FP-204)
Output Return Loss	dB	≥ 16
Isolation	dB	≥ 70
Output Impedance	Ω	75
Electronic Control EQ Range	dB	0 ~ 10
Electronic Control ATT Range	dB	0 ~ 20
General Performance		
Supply Voltage	V	A: AC (150~265)V; B: AC (35~90)V; C: DC48V
Operating Temperature	°C	-40~60
Storage Temperature	°C	-40~65
Relative Humidity	%	Max 95% no condensation
Consumption	VA	≤ 20
Dimension	mm	483 (L) \times 345 (W) \times 44 (H)

Note: The forward RF parameters are tested under the condition of using GaAs 25dB double power module in the last stage. Use other module, the parameters will be slightly different.

4. Block Diagram

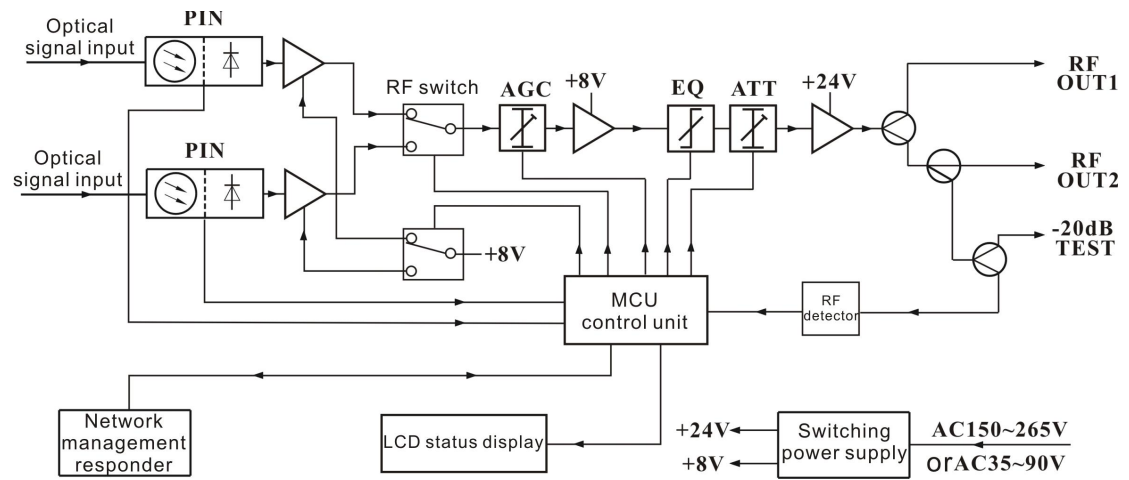

5. Relation Table of Input Optical Power and CNR

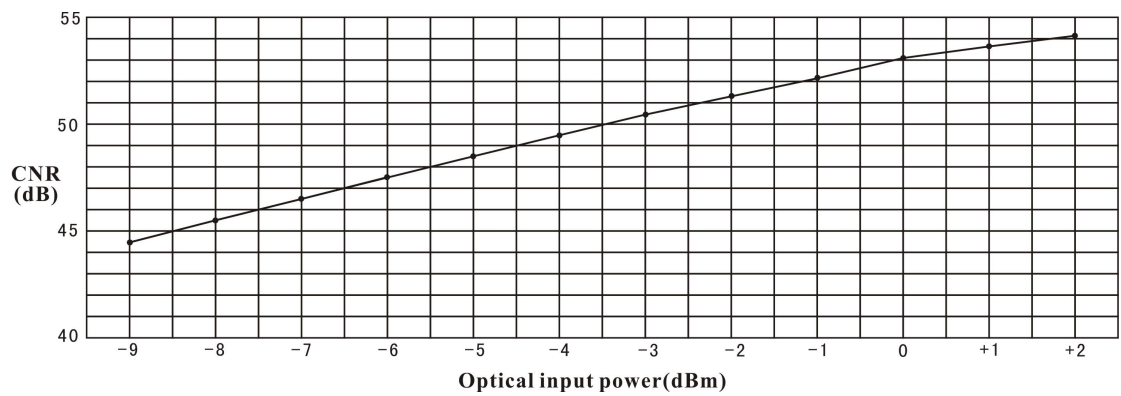


6. Function Display and Operating Instruction

Mode: Mode selection button

▲: up button. Increase the parameter.


▼: down button. Decrease the parameter.

The following is the menu function description:

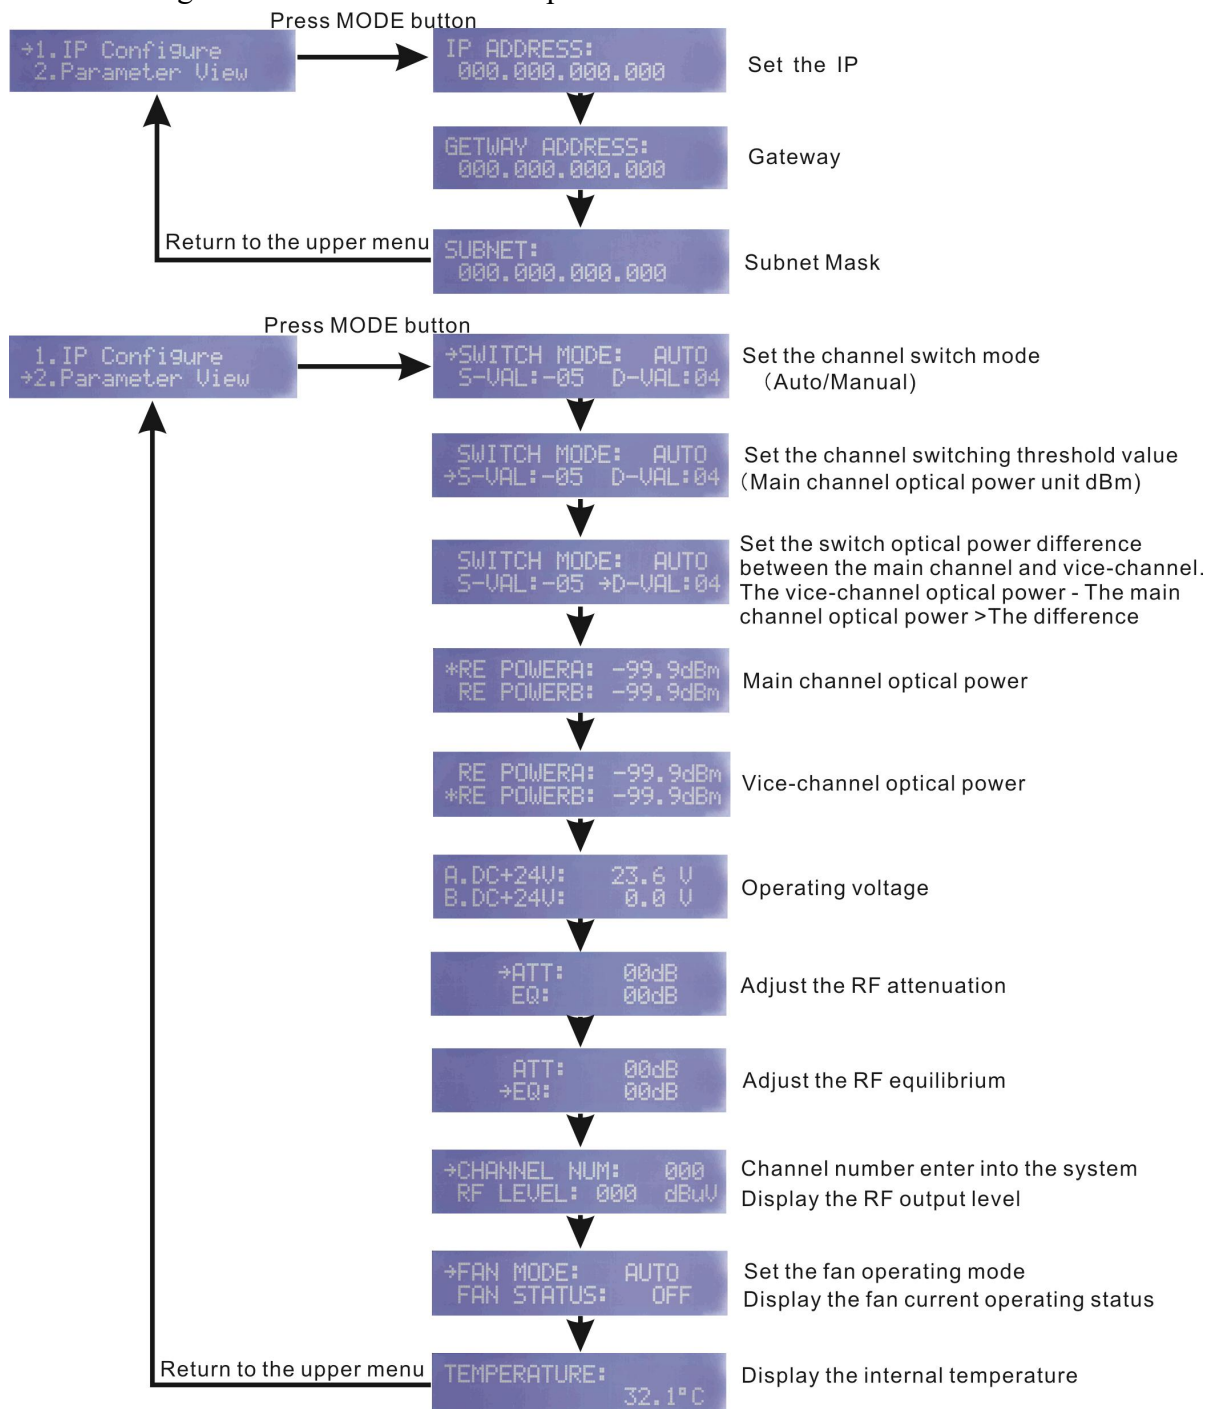

Note: The line which "→" pointed at on the left is the current menu!

7. Product diagram

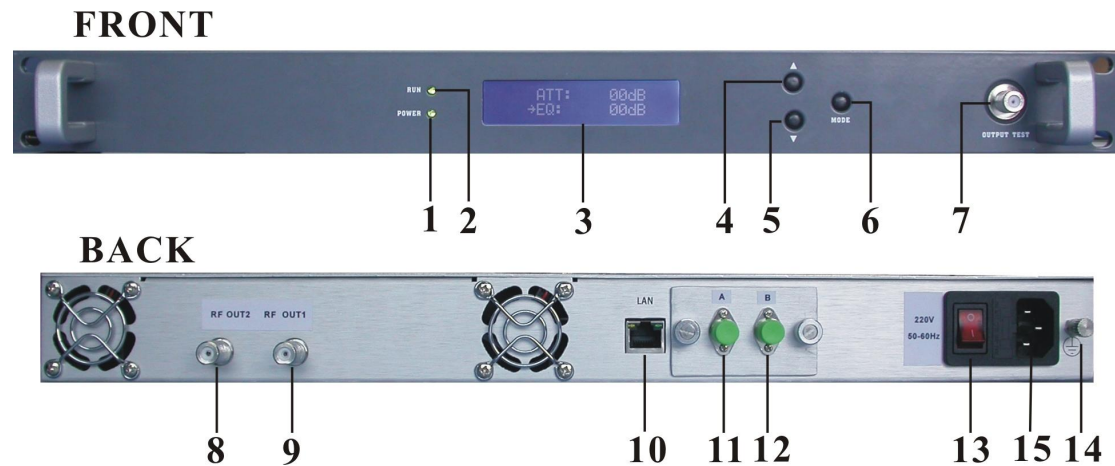

1. Power indicator	2. Running indicator	3. LCD status display screen
4. Up button	5. Down button	6. Mode display and control mode selection button
7. RF test port	8. RF output B (branch)	9. RF output A (main channel)
10. LAN network management communication port	11. A channel optical signal input	12. B channel optical signal input
13. Power switch	14. Grounding terminal	15. AC power interface

Note: The equipment can connect with the Ethernet transponder, access to network management system. The network management transponder is the optional accessory, users decide whether use according to the actual needs.

8. Common Failure Analysis and Troubleshooting

Failure phenomenon	Failure cause	Solution
After connecting the network, the image of the optical contact point has obvious netlike curve or large particles highlights but the image background is clean.	1. The input optical power of the optical receiver is too high, make the output level of the optical receiver module too high and RF signal index deteriorate. 2. The RF signal (input the optical transmitter) index is poor.	1. Check the input optical power and make appropriate adjustments to make it in the specified range; or adjust the attenuation of optical receiver to reduce the output level and improve index. 2. Check the front end machine room optical transmitter RF signal index and make appropriate adjustments.

After connecting the network, the image of the optical contact point has obvious noises.	<ol style="list-style-type: none"> 1. The input optical power of the optical receiver is not high enough, results in the decrease of C/N. 2. The optical fiber active connector or adapter of the optical receiver has been polluted. 3. The RF signal level input the optical transmitter is too low, make modulation degree of the laser is not enough. 4. The C/N index of system link signal is too low. 	<ol style="list-style-type: none"> 1. Check the received optical power of the optical contact point and make appropriate adjustments to make it in the specified range. 2. Recover the received optical power of the optical contact point by cleaning the optical fiber connector or adapter etc methods. Specific operation methods see “Clean and maintenance method of the optical fiber active connector”. 3. Check the RF signal level input the optical transmitter and adjust to the required input range. (When the input channels number less than 15, should higher than nominal value.) 4. Use a spectrum analyzer to check the system link C/N and make appropriate adjustments. Make sure the system link signal $C/N > 51\text{dB}$.
After connecting the network, the images of several optical contact points randomly appear obvious noises or bright traces.	The optical contact point has open circuit signal interference or strong interference signal intrusion.	<ol style="list-style-type: none"> 1. Check if there is strong interference signal source; change the optical contact point location if possible to avoid the influence of strong interference signal source. 2. Check the cable lines of the optical contact point, if there is shielding net or situation that the RF connector shielding effect is not good. 3. Tightly closed the equipment enclosure to ensure the shielding effect; if possible add shielding cover to the optical contact point and reliable grounding.
After connecting the network, the images of several optical contact points appear one or two horizontal bright traces.	Power supply AC ripple interference because of the bad earth of equipment or power supply.	Check grounding situation of the equipment, make sure that every equipment in the line has been reliably grounding and the grounding resistance must be $< 4\Omega$.
After connecting the network, the received optical power of the optical contact point is unstable and has large continuous change. The output RF signal is unstable, too. But the detected output optical power of the optical transmitter is normal.	<p>The optical fiber active connector types do not match, maybe the APC type connect to PC type, make the optical signal cannot normal transmission.</p> <p>The optical fiber active connector or adapter may be polluted seriously or the adapter has been damaged.</p>	<ol style="list-style-type: none"> 1. Check the type of optical fiber active connector and adopt the APC type optical fiber active connector to ensure the normal transmission of optical signal. 2. Clean the polluted optical fiber active connector or adapter. Specific operation methods see “Clean and maintenance method of the optical fiber active connector”. 3. Replace the damaged adapter.


9. Clean and maintenance method of the optical fiber active connector

In many times, we consider the decline of the optical power as the equipment faults, but actually it may be caused by that the optical fiber connector was polluted by dust or dirt. Inspect the fiber connector, component, or bulkhead with a fiberscope. If the connector is dirty, clean it with a cleaning technique following these steps:

1. Turn off the device power supply and carefully pull off the optical fiber connector from the adapter.
2. Wash carefully with good quality lens wiping paper and medical absorbent alcohol cotton. If use the medical absorbent alcohol cotton, still need to wait 1~2 minutes after wash, let the connector surface dry in the air.
3. Cleaned optical connector should be connected to optical power meter to measure output optical power to affirm whether it has been cleaned up.
4. When connect the cleaned optical connector back to adapter, should notice to make force appropriate to avoid china tube in the adapter crack.
5. The optical fiber connector should be cleaned in pairs. If optical power is on the low side after clean, the adapter may be polluted, clean it. (Note: Adapter should be carefully operated, so as to avoid hurting inside fiber.
6. Use compressed air or degrease alcohol cotton to wash the adapter carefully. When use compressed air, the muzzle aims at china tube of the adapter, clean the china tube with compressed air. When use degrease alcohol cotton, insert directions need be consistent, otherwise can't reach a good clean effect.

Hangzhou Prevail Communication Technology Co., Ltd

Hangzhou Prevail Optoelectronic Equipment Co., Ltd

Statement: Both **PREVAIL** and  are the registered trademarks of our company. We have the right to use either of them.